

X360 Rear Wheel Axle Assembly X-Treme Scooters September 2006

Order of parts, Sprocket side. Listed left to right:


Left Side: Nut, Washer, Tensioner, Frame, Large Spacer, Sprocket.

Left Side Assembly: Large spacer is placed on the outside of the sprocket in between the sprocket and frame of the scooter. On the outside of the scooter frame, place the chain tensioner and finally washer and nut.

Order of parts, Brake side. Listed right to left:

Right Side: Nut, Washer, Tensioner, Frame, Medium Spacer, Brake Hub, Small Spacer, Gold Inside Hub.

Right Side Assembly: The small spacer goes inside the gold brake hub that is attached to the rear wheel. The Brake hub goes next. Then is the medium spacer that is between the outside of the brake hub and the scooter frame. On the outside of the scooter frame, place the chain tensioner and finally the washer and nut.

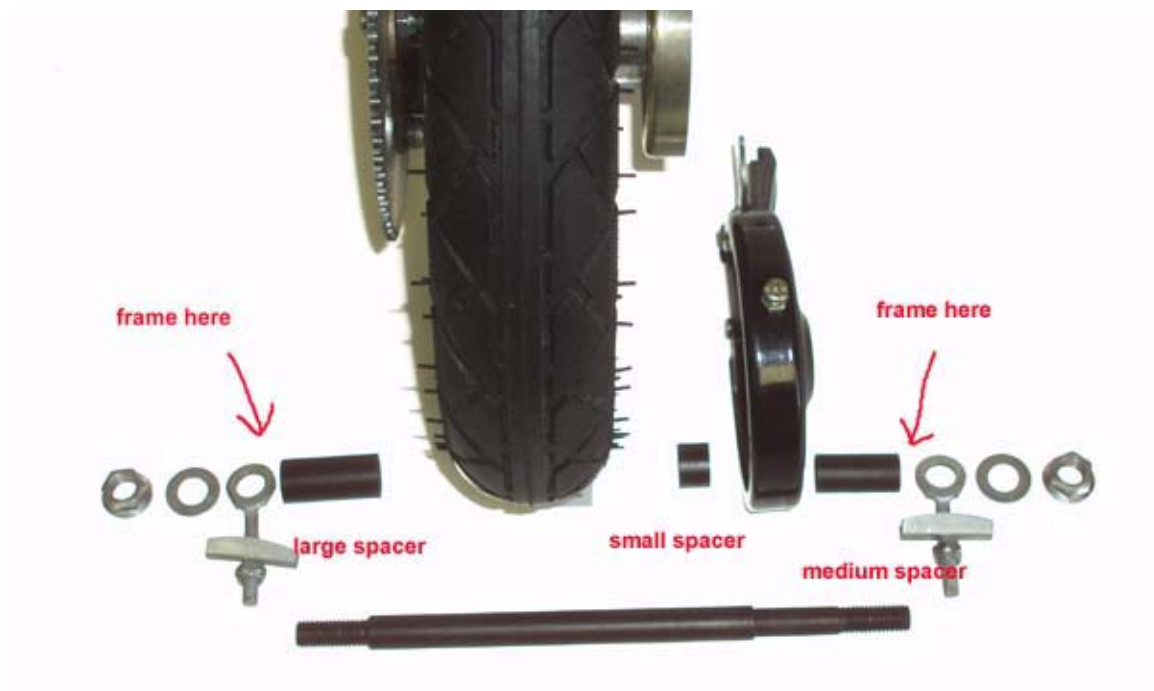

For additional assistance, contact support at www.x-tremescooters.com/support/